


In the hoop phone case

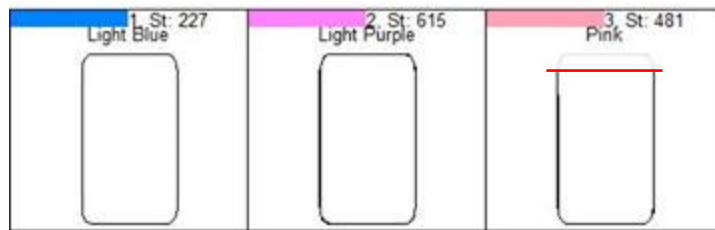

- 1) Hoop stabilizer and run step 1 placement line
- 2) Place felt on top of stabilizer and run step 2. Add monogram if desired.
- 3) Place felt on back of the hoop. Line up edge of felt and place just under the curves of the outline. See stitch map. The red line indicates the approximate location to line up felt. Run final step.
- 4) Remove from hoop and trim excess felt.

*Phone case pictured above was made with woven fabric adhered to felt with Heat 'n Bond Lite and have added monogram after 2).