


Snow White Phone Case ITH Embroidery Design




Hoop your medium or heavy tearaway stabilizer.




Run the placement line.

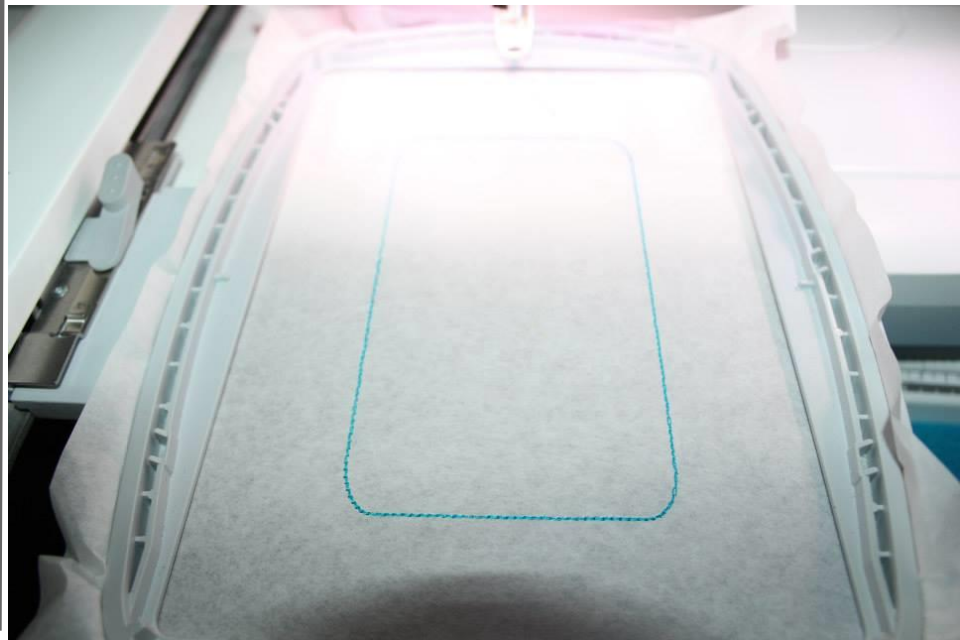


Place your felt so that it completely covers the placement line.

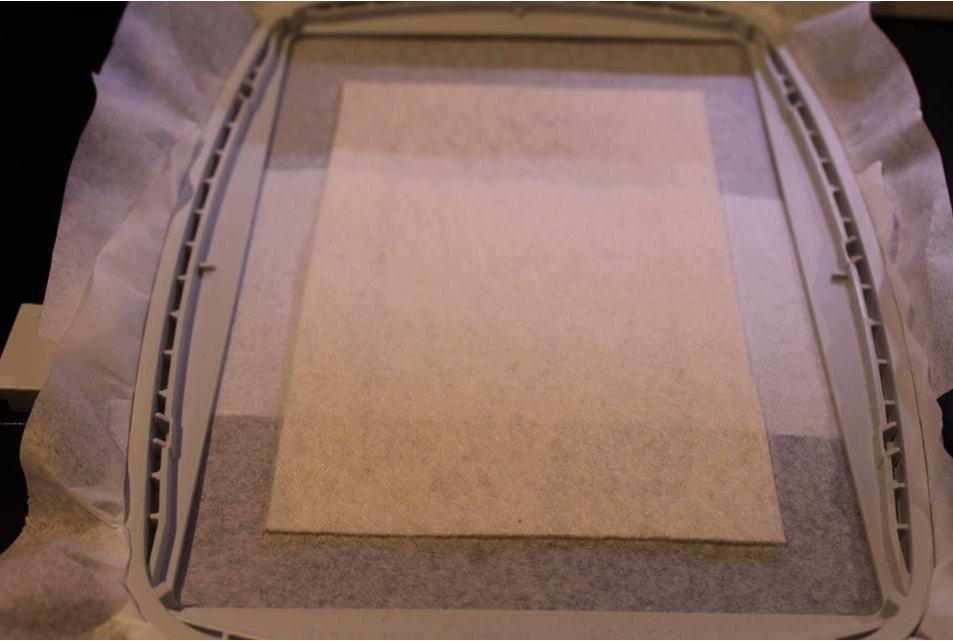


Run the Placement stitch for the hair.

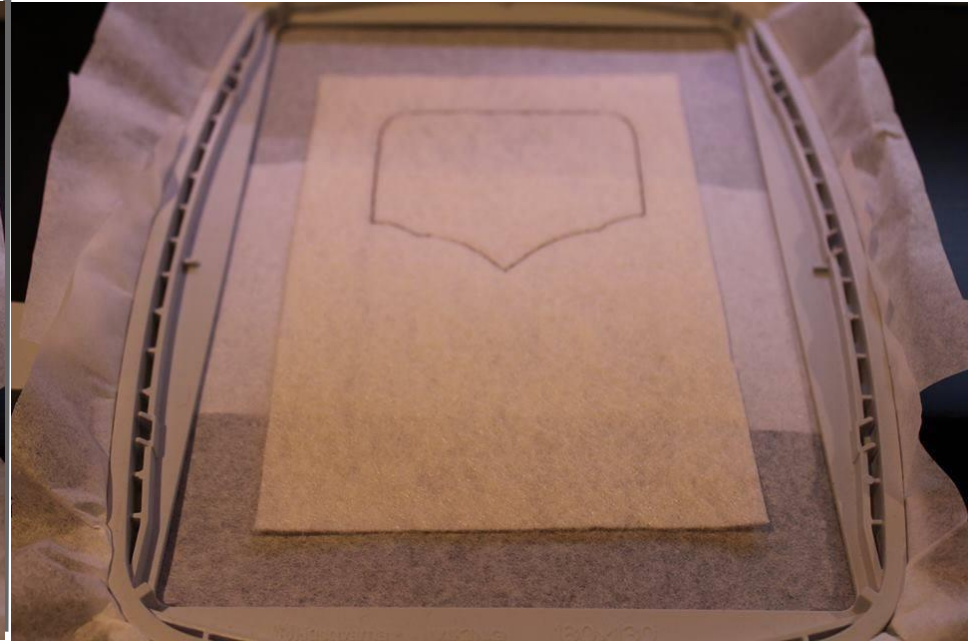

Next is the stitch to tack down the hair. Be sure to cover the placement line completely.

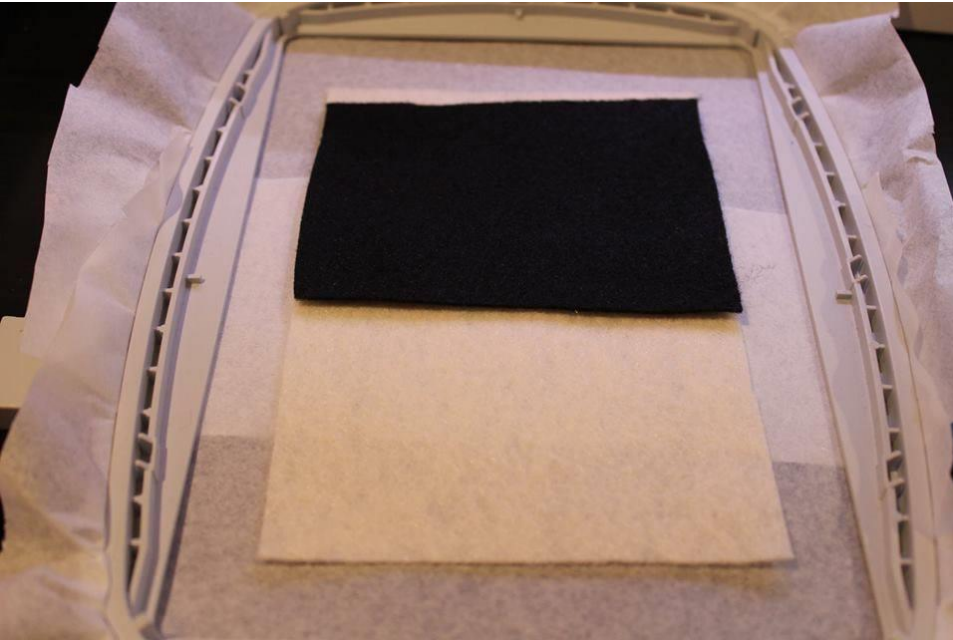

Place the dress material so that it covers the bottom and side placement lines, and goes approximately to the bottom of the dolls face.

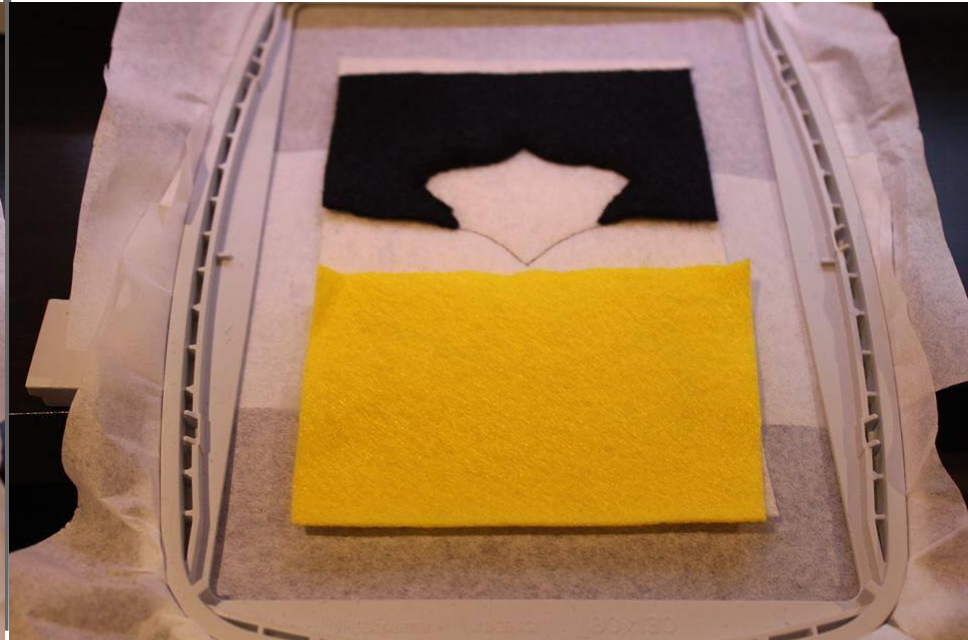

Run the tack down for the dress, which also creates the placement line for the bodice. Trim along the bodice.



Cover the bodice placement lines with the darker blue bodice material.



Run the tack down stitch for the bodice. IN addition to tacking down the bodice, this creates the placement stitches for the shoulder applique. Trim the bodice along the skirt and along the face.



Cover the placement stitches with the shoulder material. Run the tack down stitch.




Trim the shoulder applique.



Run the decorative stitching for the shoulder details, facial features, and headband.



Remove hoop from machine without unhooping the project. Using tape, adhesive spray or by “floating” the design underneath the hoop, add your backing felt so that it completely covers the placement line. Add a second piece of felt so that it covers the bottom and side placement lines, but **DOES NOT** cover the top placement line (Leaving a place for the phone to be inserted. Return hoop to the machine.

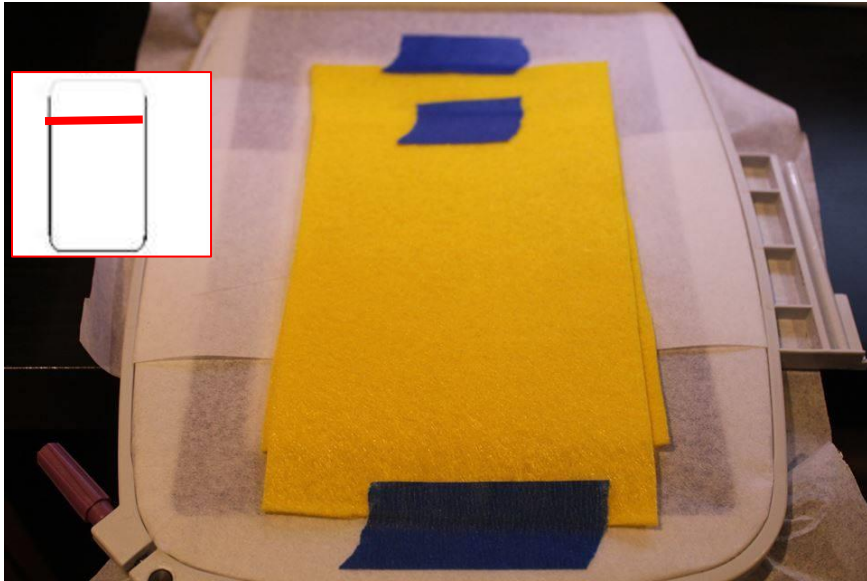

Put the hoop back onto your machine and finish up the final stitch to attach the backing to the case.



Remove from hoop.



This is what the front will look like when complete. Trim $\frac{1}{4}$ inch from the edges and you are done!

